


GCP 2.0 - Quick Start Guide

1. Use the supplied Ethernet cable to connect your device to your router or modem.
2. Use the power supply provided to power up your device. Connect the power cable to the USB-C port on the device (#2 in the appendix below) then plug the power adapter into a wall socket.
3. Complete the following steps to register and activate your device:
 - a. To register your device visit <https://gcp2.net/reg>

Enter the case-sensitive “ID” shown on your device screen into the “Device ID” field on the registration form. Then fill out the rest of the fields with your personal information, including a password of your choosing and the physical address where the device will be located.

Once you have completed your entries click on “Register and Send Activation Code” to register yourself and your device and to proceed to the Activation screen.

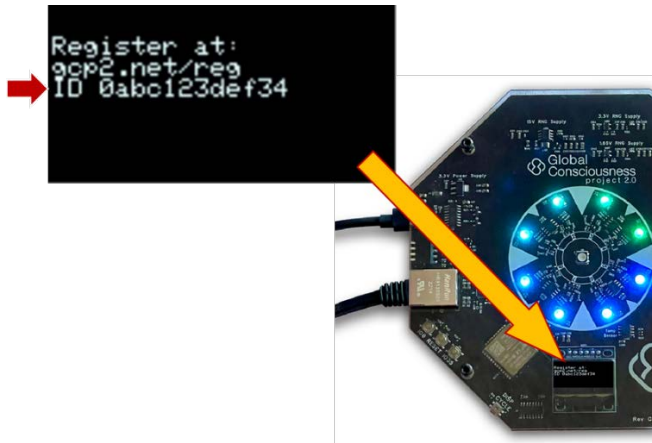


Note: If the display turns off (power save mode), it can be turned back on at any time by pressing the “DISP CYCLE” button to the left of the display (#3 in the appendix below).

The screenshot shows the registration page for the GCP 2.0 device. At the top, there is a navigation bar with links for Home, About, GCP 2.0 Network, and Community. Below the navigation bar, a green "Congratulations!" message reads: "You've ordered and received your GCP2 device! Time to get it online!". The main content area is titled "Register Your GCP 2.0 Device (Quick Start Guide)" and contains a registration form with the following fields: Device ID (12 chars.), Email Address, Password (8+ chars.), Confirm Password, Physical Address Line 1, Physical Address Line 2, Country, City, State or Province, and Postal Code. A blue button at the bottom of the form is labeled "Register and Send Activation Code". Red arrows point from the text "Enter the ID number displayed on your device" to the Device ID field, and from the text "Click to register your device and proceed to the Activation screen" to the Register and Send Activation Code button.


- b. A 6-digit “Activation Code” will be sent to your device and will appear on the device display screen.



Enter the 6-digit “Activation Code” displayed on your device into the “Activation Code” box provided on the website, then click on “Activate” to complete the activation process.

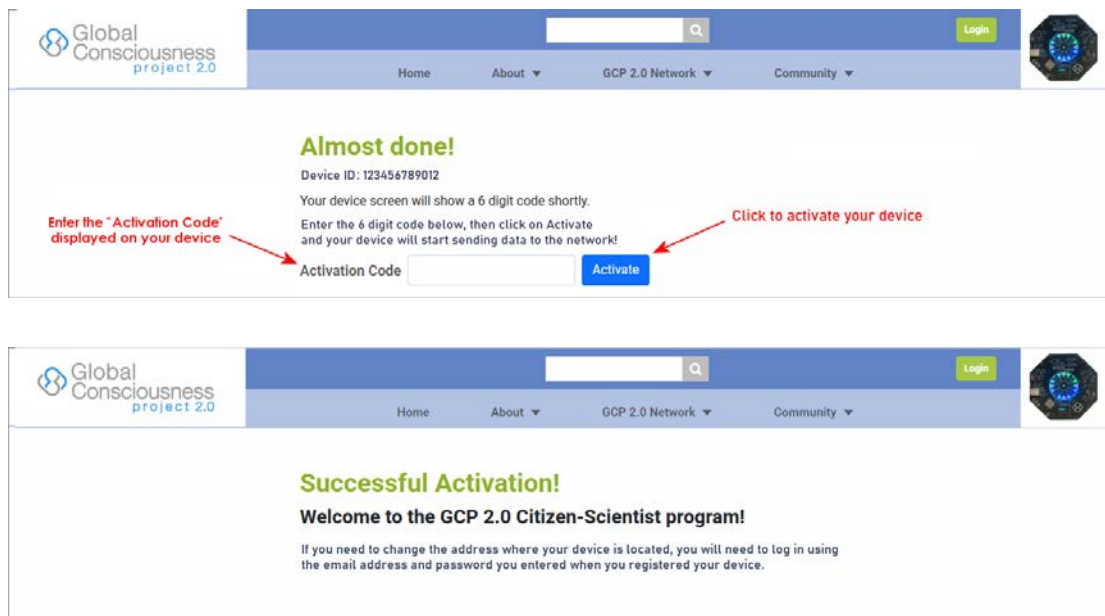


4. After approximately 7 minutes the device should display the “Collecting Data” screen. This indicates that the device is working properly and sending data to the GCP 2.0 network!



5. The preferred location for your RNG is somewhere where normal temperature fluctuations are minimized as much as possible. For example don't put it in or near a window or heating/cooling vent where direct sunlight, radiant heat or cold drafts could cause large temperature swings. Also do not locate near large electrical appliances like an air conditioner, microwave oven etc. Find some quite corner where it won't be disturbed but you can still glance at it once and while to make sure it is still on and there are no red attention LEDs flashing.

Appendix

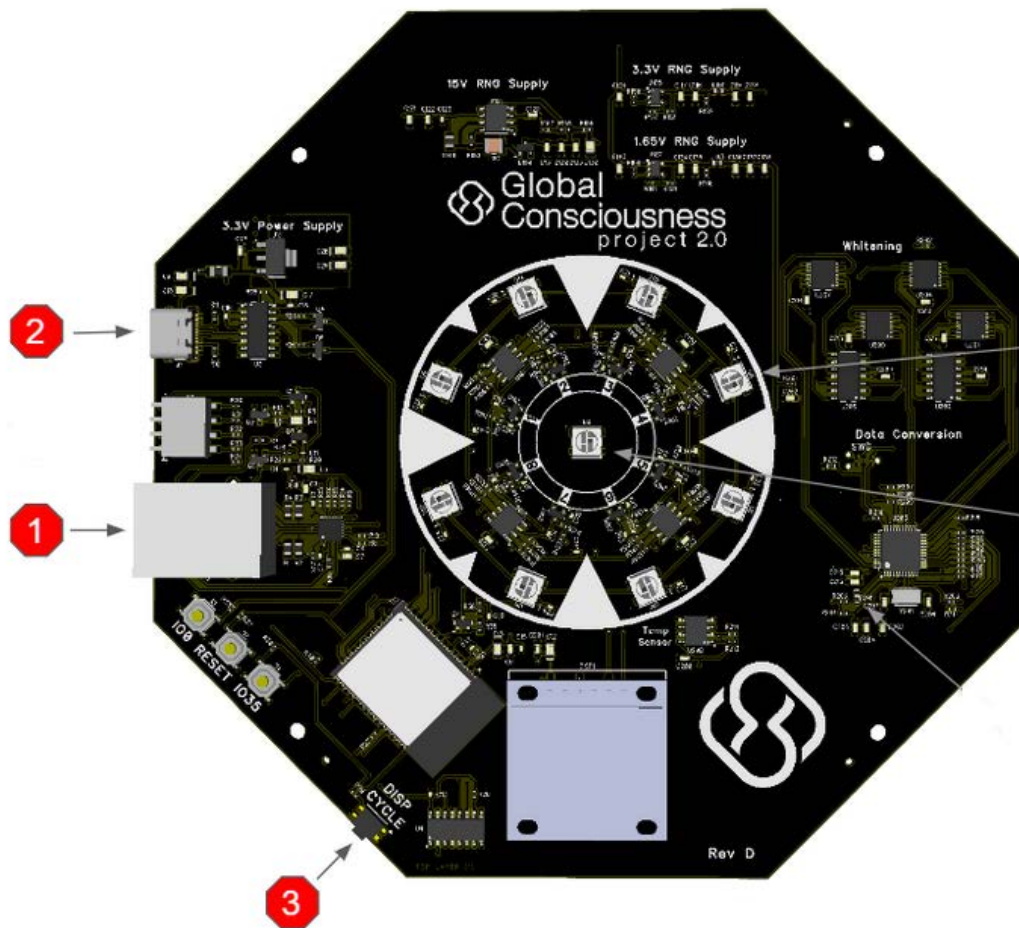

1. Ethernet port - Connects to a Modem, Router, or Switch
2. Power port (USB-C) - Connects to CanaKit 3.5A Power Supply Only (provided)
3. DISP CYCLE button - Toggles between a Status screen and Hardware Information screen